

PRODUCT SPECIFICATION

Customer	
Project	
Part No.	Z43029-SPC028W-771S-Y1
Remarks	□APPOVAL FOR SPECIFICATION ONLY ■APPOVAL FOR SPECIFICATION AND SAMPLE

CUSTOMER			Z	HUNYIKE	П
Approved	Checked	Prepared	Approved	Checked	Prepared
Ву	Ву	Ву	Ву	Ву	Ву
				文小丽	石进



Revision Record

Rev. No.	Date	Description
V1.0	2022-04-22	Preliminary Specification Release.

Contents

1. General Specifications	3
2. Interface Definition Description	4
3. Mechanical Drawing	5
4. Electrical Specifications	6
5. Delivery Inspection	10
6. Reliability Test	12
7. Precautions	13
8. Packing and Storage	15

1. General Specifications

No.	Item	Specification	Unit
1	Display Size (Diagonal)	4.3inch	-
2	Display Resolution	480(H) × RGB × 800 (V)	pixels
3	Pixel Pitch	0.039(H) × 0.117 (V)	um
4	LCM Outline Dimension (Without FPC)	60.46 (W) ×103.65 (H) ×1.86 (T)	mm
5	LCD Outline Dimension	59.06(W) × 100.85(H) × 0.4 (T)	mm
6	LCD Active Area	56.16 (W) ×93.60 (H)	mm
7	View Direction (Gray Inversion)	FULL VIEW	-
8	Driver IC	ST7701S-G5	-
9	Pixel Arrangement	RGB-Stripe	-
10	Display Mode	Normal Black	-
11	Pixel driving Element	a-Si TFT	-
12	LCD Transmittance	Min:3.6% Typ.: 4.24%	-
13	LCD Contrast Ratio	Typ.:1500 Min:1000	-
14	FPC Version	Z43029-SPC028W V1	-
15	Interface	SPI+RGB	-
16	Operating Temperature	-20°C∼ 70°C	-
17	Storage Temperature	-30°C∼ 80°C	-
18	Backlight Arrangement	LED/5 Series 2 Parallel (10 lights in total)	-
19	Luminance	Тур.: 500	nit
20	Weight	-	kg




2. Interface Definition Description

PIN NO.	PIN DEF.	FUNCTION DESC.
1	LEDA	POWER SUPPLY+ FOR BACKLIGHT
2	LEDK	POWER SUPPLY- FOR BACKLIGHT CATHODE
3	VCC	POWER SUPPLY
4	GND	Ground
5	LCD_ID0	ID0
6	LCD_ID1	ID1
7	LCD_ID2	ID2
8-13	GND	Ground
14	VSYNC	Vertical sync. Signal in RGB I/F.
15	HSYNC	Horizontal sync. Signal in RGB I/F.
16	DOTCLK	Pixel clock signal in RGB I/F
17	DE	Data enable signal in RGB I/F DE mode.
18-33	DB0-DB15	Data bus
34	RESET	Reset Signal pin
35	CS	Chip Select input pin (Active Low)
36	SCL	A synchronous clock signal in SPI I/F
37	SDA	Serial input signal in SPI I/F
38	GND	Ground
39	VCC	Power supply
40	GND	Ground

RESET voltage should be consistent with VDDI voltage, or there probably is black screen fault when power on.



3. Mechanical Drawing

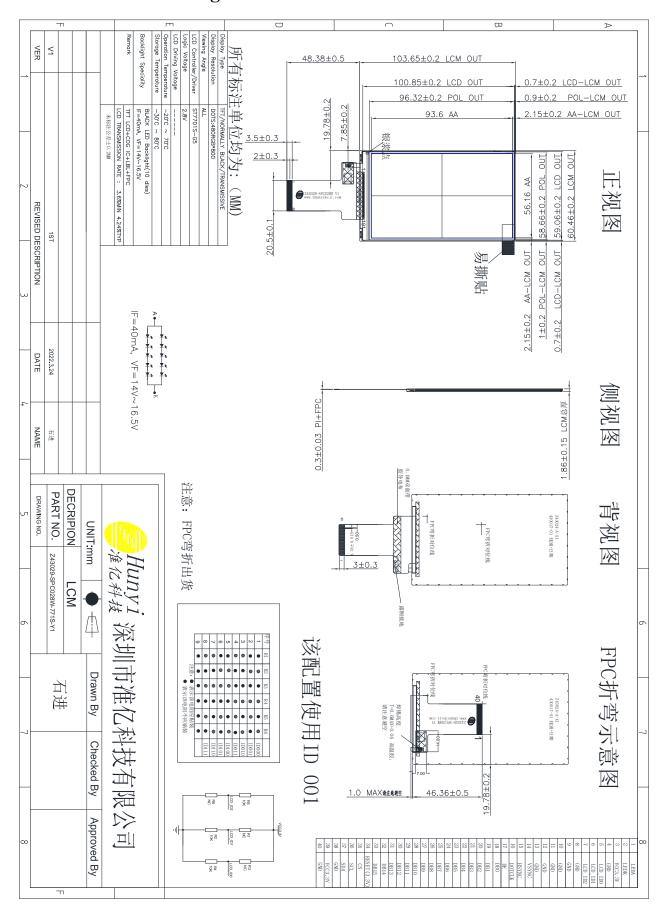

4. Electrical Specifications

4.1. LCD Optical Charcteristics

Item		Symbol Conditions		Specification			Unit	Nata
		Symbol	Conditions	Min.	Тур.	Max.		Note
Transmittance (V	With PL)	T(%)	Viouing	3.6	4.24	-	%	-
Contrast Ratio		CR	Viewing normal angle	1000	1500	-	-	-
Response Time		TR+TF	x = y =0	-	35	40	ms	-
	Шан	Өх+		70	80	-		
Viouving Angle	Hor.	Өх-	CR ≧ 10	70	80	-	daa	
Viewing Angle	Van	Өу+	at 25℃	70	80	-	deg.	-
	Ver.		70	80	-			

4.2. Electrical Specifications

Item	Symbol	S	Unit		
item	Symbol	Value	Range	-	Unit
Power For Analog Circuit	AVDD	-	-	-	V
TFT Gate On Voltage	VGH	12	10~18	-	V
TFT Gate Off Voltage	VGL	-12	-10~-15	-	V
TFT Common Electrode Voltage	Vcom	-	-2~0	-	V

4.3. Typical Operating Conditions

Item	Symbol	Min.	Тур.	Max.	Unit
Analog Supply Voltage	VCI	2.5	2.8	3.6	V
Digital Supply Voltage	VCC	2.5	2.8	3.6	V
I/O Supply Voltage	IOVCC	1.65	1.8	3.3	V
Input High Voltage	VIH	0.7 × IOVCC	-	IOVCC	V



Input Low Voltage	VIL	0	-	0.3 × IOVCC	V
Output High Voltage	VOH	0.8 × IOVCC	-	-	V
Output Low Voltage	VOL	-	-	0.2 × IOVCC	V

4.4. Backlight Circuit Specifications

Item		Symbol	Min.	Тур.	Max.	Unit	Test Condition
Current		I_{B}	-	40	-	mA	-
Voltage		$V_{\rm f}$	14	15	16	V	-
LCM Unifor	mity	-	80	-	-	%	10.40
Life Tim	e	-	30000	-	-	Hr.	If=40mA
Power Consur	nption	PBL	-	600	-	mW	
	D 1	Rx	-	-	-	-	
	Red	Ry	-	-	-	-	
1.014		Gx	-	-	-	-	
LCM	Green	Gy	-	-	-	-	Average the brightness
Chromaticity Coordinate	Blue	Bx	-	-	-	-	EV at 9 points, Optical
		Ву	-	-	-	-	- Instrument BM-7
	11/11 ·	Wx	0.2730	0.2750	0.2790	-	
	White	Wy	0.2900	0.2930	0.2960	-	

4.5. LCD Power Consumption

Mode	Symbol	Тур.	Max.	Unit			
Normal Mode	VCC+IOVCC -		-	mA			
Test Condition: VCC=3.3V.							
Interface Drive	Interface Drive Type: row flipping or column flipping.						
IPS Type LCD Panel => All Black Pattern.							
TN Type LCD Panel => All White Pattern.							
Temperature: 25°C.							



Mode	Symbol	Тур.	Max.	Unit
Sleep Mode	VCI+IOVCC	-	-	μΑ

Test Condition: VDD=3.3V.


DC/DC converter is enabled. Internal oscillator is started and panel scanning is started.

Except for the IC internal crystal oscillator and panel scanning, other functions are suspended.

Temperature: 25°C.


4.6. Measuring System

4.6.1. LCM Viewing Angle

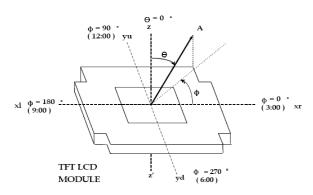

Viewing angle is the angle at which the contrast ratio is greater than 10. The angles are determined for the horizontal or x axis and the vertical or y axis with respect to the z axis which is normal to the LCD surface.

4.6.2. Response Time

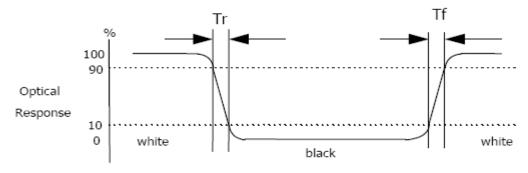

Response time is the time required for the display to transition from white to black (Rising time, Tr) and from black to white (Falling time, Tf) for additional information.

4.6.3. Contrast Ratio (CR)

Contrast Ratio (CR) is defined mathematically as:

 $Contrast\ Ratio = \frac{Surface\ Luminance\ with\ all\ white\ pixels}{Surface\ Luminance\ with\ all\ black\ pixels}$

Page 8/16

Surface luminance is the center point across the LCD surface 500mm from the surface with all pixels displaying white.

4.7. Power On / Power Off

Notes:


4.7.1. Power On/ Power off

9 POWER ON/OFF SEQUENCE

VDDI and VDDA can be applied or powered down in any order. During the Power Off sequence, if the LCD is in the Sleep Out mode, VDDA and VDDI must be powered down with minimum 120msec. If the LCD is in the Sleep In mode, VDDA and VDDI can be powered down with minimum 0msec after the RESX is released. CSX can be applied at any timing or can be permanently grounded. RESX has high priority over CSX.

- 1. There will be no damage to the ST7701S if the power sequences are not met.
- 2. There will be no abnormal visible effects on the display panel during the Power On/Off Sequences.
- There will be no abnormal visible effects on the display between the end of Power On Sequence and before receiving the Sleep Out command, and also between receiving the Sleep In command and the Power Off Sequence.
- 4. If the RESX line is not steadily held by the host during the Power On Sequence as defined in Sections 9.1 and 9.2, then it will be necessary to apply the Hardware Reset (RESX) after the completion of the Host Power On Sequence to ensure correct operations. Otherwise, all the functions are not guaranteed.


The power on/off sequence is illustrated below

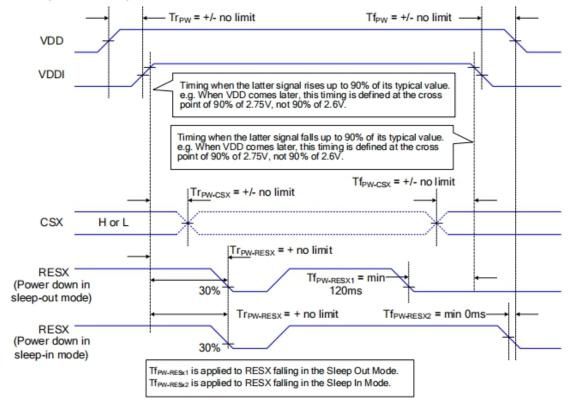

5. Delivery Inspection

5.1. Quality Inspection Environmental Conditions

- 5.1.1. Viewing distance: the normal viewing distance between the screen and the inspector is 30±5cm; Inspection Angle: 90°±45° (90° indicates that the inspector's perspective is perpendicular to the product to be inspected).
- 5.1.2. Visual inspection illumination: 1000±200LUX;Electrical inspection illumination: 200±100LUX;Ambient temperature 25±5°C, ambient humidity 55±15%RH.

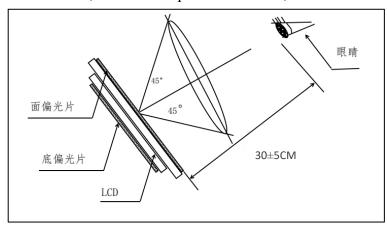

5.2. Quality Inspection Standard

No.	Defect		Standard	Defect Grade	Result
			Φ ≤ 0.10mm	Ignore	OK
		< 7 inches	$0.10\text{mm} < \Phi \leq 0.20\text{mm}$	Minor Defect	OK
	Snot Defect		DS ≥ 10mm		
	Spot Defect (including bright 1 spot / color spot /		Φ > 0.20mm	Serious Defect	NG
1		≥ 7 inches	$\Phi \leq 0.15$ mm	Ignore	OK
	bubble / dark		$0.15 \text{mm} < \Phi \le 0.25 \text{mm}$		
	spot, etc.)		DS ≥ 10mm	Minor Defect	OK
			Φ > 0.25mm	Serious Defect	NG
		Φ: defect diameter. DS: spacing.			
2	Linear Defect	< 7 inches	W≤0.02mm,	Ignoro	OK
	(scratches,	/ menes	L: unlimited	Ignore	UK



	filaments, etc.)		0.02mm < W	/ ≤ 0.03mm	Minor Defect	OK
			L ≤ 5	mm		
			W > 0.0	03mm	Serious Defect	NG
			$W \le 0.0$	03mm	Ignore	OK
			L: unli	mited	-5	
		≥ 7 inches	0.03mm < W	<i>I</i> ≤ 0.05mm	Minor Defect	OK
			L ≤ 5	mm		
			W > 0.0	05mm	Serious Defect	NG
		W: defect width	. L: defect length. D	S: spacing.		
		Display Area	Judge by S	pot Defect		
3	Polarizer Bubble	Black Edge	The distance from	_	Minor defect	OK
	Area The distance from the edge of the display area is less than 0.5mm.		_	Judge by Spot Defect		
4	Polarizer Bump (Mark)	Display Area / Black Edge Area	Invisible when the touch screen or cover plate is assembled.		Minor Defect	OK
		Item	Method	Instrument	Median	Tolerance Range
				0 1 1	According to the	
			x, y Color	Optical	actual test on the	± 0.04
5 Color and Luminance	Color	Coordinate	Instrument BM-7	sample confirmed by the customer.	± 0.04	
			DIVI-/			
		Average the	Optical	According to the	± 20%	
	Luminance	brightness EV at	Instrument	actual test on the		
			9 points BM-7		sample confirmed	
			•		by the customer.	
6	Other Standards Subject to the negotiation by both parties.					



7	Warranty Period	One year after sale.		
8	Guarantee	ROHS REACH		
9	Websites	Official: https://en.zhunyikeji.com/ Globle Resources: https://zhunyikeji.en.alibaba.com/ Alibaba: https://zhunyikeji.en.alibaba.com/ 1688: https://shop9641057ru80o3.1688.com/		

6. Reliability Test

Item	Condition	Result Determination
High-Temperature Storage	80°С 120Н	
Low-Temperature Storage	-30°C 120H	After the test, leave the LCD
High-Temperature Operation	70°C 120H	samples indoors at normal
Low-Temperature Operation	-20°C 120H	temperature and humidity for 2H for function and
High-Temperature and High-Humidity	60°C 90%RH 120H	appearance inspection. The sample should meet the
Thermal Cycling Test	-30°C/0.5H ~ +80°C/0.5H 24 cycles in total	requirements on electrical performance, but be free from
Vibration Test	Vibration Test	
ESD Test	$\pm 6 kV$ Human Body Mode 150pF/330Ω $\pm 10 kV$ Air Mode 150pF/330Ω	

Note:

- 1) Each module under test can only be used for one of the test items.
- 2) The quantity of samples for each test item is 2.
- 3) Fault Judgment Criterion: Basic Specifications, Electrical Specifications, Mechanical Specifications, Optical Specifications.



7. Precautions

- 7.1. The display screen consists of glass and polarizer. Since the glass is fragile, the user must pay special attention to the edge area, and protect it from falling, vibration, or mechanical impact.
- 7.2. If the display screen is damaged and the liquid crystal material leaks, be sure not to get any in the mouth. If the liquid crystal material contacts the skin or clothes, flush off with soap and water.
- 7.3. Do not apply excessive force to the display screen or the joint part, or the color will change. Do not touch the display screen with bare hands, which will stain the display area and degraded insulation between terminals (some of the appearance is determined by the polarizer).
- 7.4. The polarizer covering the display panel of the LCD module is soft and easy to be scratched, be sure to handle carefully. Do not touch, impact, press, or rub the exposed polarizers with anything harder than an HB pencil lead (e.g.: glass, tweezers, etc.). Do not place or attach anything onto the display area to avoid leaving marks. The condensed material on the surface or terminals due to cold will damage or stain the polarizer. After the test in low temperature environment, the product must be warmed up in a container before put into the room temperature environment.
- 7.5. If the display panel is stained, blow warm air onto the surface and gently wipe it with a soft and dry cloth. If it is seriously contaminated, wipe it with a wet cloth dipped in one of the following solvents:
 - glycerol
 - ethyl Alcohol

Do not scrub, and avoid damaging the display panel.

- 7.6. Solvents other than those mentioned above may damage the polarizer. In particular, never use any of the following solvents:
 - water
 - ketone
 - arene

Wipe off saliva or water drop immediately, the contact with water over a long period of time may cause deformation or color fading. Avoid contact with oil or grease.

- 7.7. Special note: minimize electrode corrosion. Because electrode corrosion can be accelerated by water droplets, condensation of humidity, or electrification in a high humidity environment.
- 7.8. Assemble the LCD Module by the mounting holes. Make sure the LCD module make sure there is no bending, distortion, or deformation. Do not forcibly pull or bend the transmission wire or the backlight wire.




- 7.9. Do not disassemble the LCD module.
- 7.10. NC terminal should be disconnected. Do not connect any device.
- 7.11. If the logic circuit power supply is off, do not send the input signal.
- 7.12. Since the LCD module is integrated with CMOS, pay special attention to the modules. To prevent electrostatic damage, be careful to maintain an suitable work environment.
 - Make sure the module has the same potential as the human body before take the LCD module out
 of the packing box for assembly. The reliable grounding is necessary during module processing.
 - The required tool, such as the electric soldering iron, must be reliably grounded. Make sure the it is connected to AC power supply, and no electric leakage. When fixing the module with electric screwdriver, it must be grounded, to reduce the electromagnetic wave generated by the electric commutator spark as much as possible.
 - Do not assemble or operate under dry condition to reduce the static electricity. To reduce static electricity, the workplace must not be too dry. The recommended relative humidity is 50 60%.
 Keep your work clothes and work table grounded as much as possible
 - The LCD module is coated with a film to protect the display surface. Be careful when peeling off
 the film to reduce the generated static electricity.
- 7.13. Since the LCD module has high precision assembly and regulation, try to avoid excessive impact on the module or making any changes:
 - Do not change the shape of the tab on the metal frame.
 - Do not drill any extra hole, modify the shape, or change the position of component on the printed circuit board.
 - Do not change or damage the pattern on the printed circuit board.
 - Never modify the zebra strip (conductive rubber) or heat seal connector.
 - Do not make any change with the electric soldering iron except for the joint.
 - Do not throw, bend or twist.

8. Packing and Storage


8.1. Packing Method

Step 1

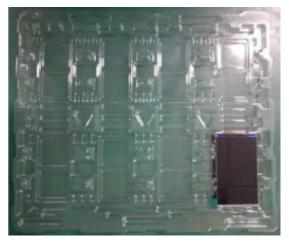

Take 1pcs of the product, put it into a anti-static bag.

Step 2

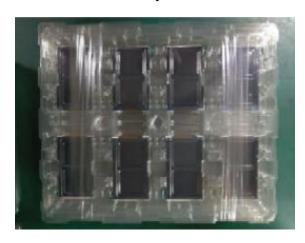

Take 2 bags of product to place into the carton, make sure they are surface to surface. Put a piece of EPE pad between the carton and the separator to protect the products.

Step 3



Put the products into cartons one by one, each carton contains 60 pieces of products.

Step 4



The cartons should be taped and shipped with labels.


8.2. Storage Method

Store in an ambient temperature of 23±5°C, and in a relative humidity of 60±15%. The storage period should not exceed 12 months. Do not expose to the sun for a long period of time.

- 8.2.1. Store in clean environment, free from dust, active gas, or solvent.
- 8.2.2. Store in anti-static environment.



8.3. Nomenclature

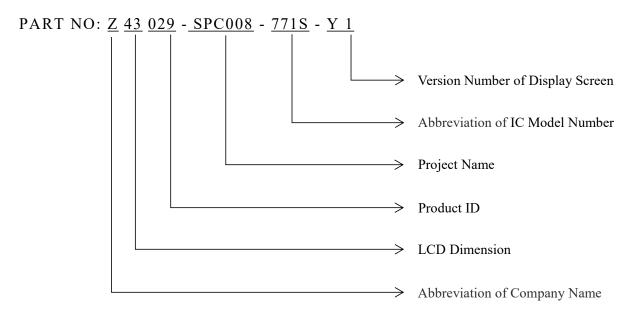

8.4. Label

	Shenzhen Zl	nunyi Technology Co., Ltd.
Product:	Display Screen	LEVEL:3
Spec.:		
P/N:		Dallo &
Lot:		REACH COMPLIANT ESD
D/C		国数数200
Qty.:		
Supplier Code:		
РО		
R/K		
Version: A	X	XXXXXX, YYYY-00000000000000000, KKKK, WWWW, AAAAA.